

Robot Vacuum Replacement Kit

- Tapo RVA100
- Tapo RVA101
- Tapo RVA102
- Tapo RVA103
- Tapo RVA200
- Tapo RVA300
- Tapo RVA400




Replacement Videos

Scan QR code or visit

<https://www.tp-link.com/support/setup-video/#robot-vacuum-accessory>



Tapo RVA100

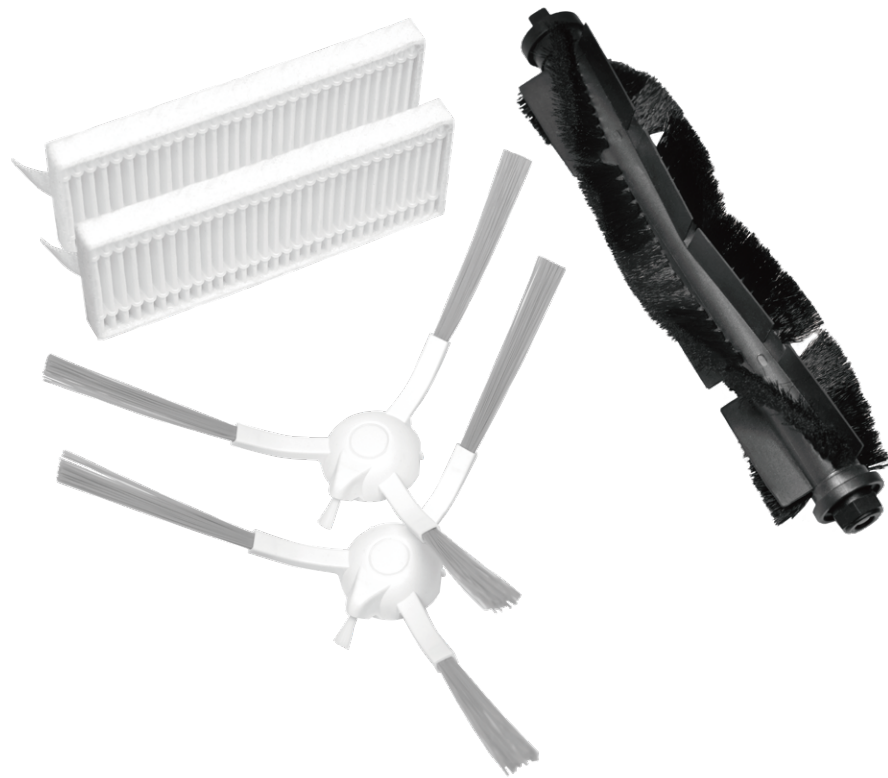

Washable HEPA Filter ×2



Side Brush ×2

Main Brush ×1

Compatible Models:

Tapo RV30 Plus, Tapo RV30

Tapo RV10 Plus, Tapo RV10

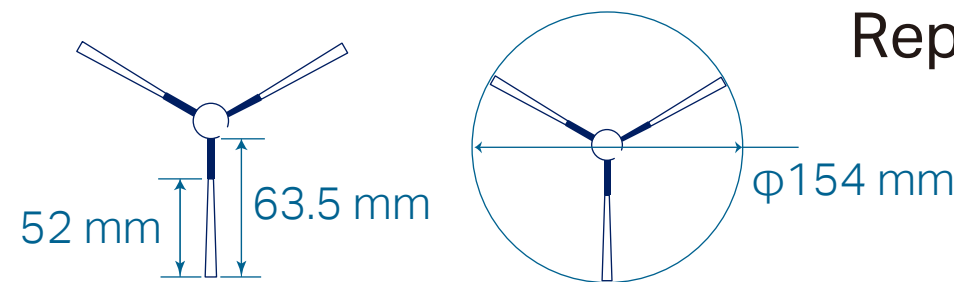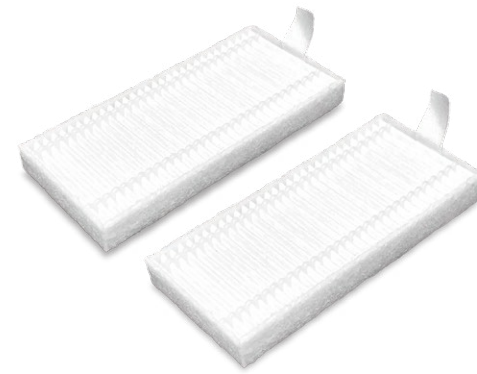

Washable HEPA Filter

Material: Washable PTFE + H11 filtering

Dimension: 100 x 40 x 8.5 mm (3.9 x 1.6 x 0.3 in)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months

Side Brush

Material: ABS757 + TPU + PBT

Size Diameter: 154 mm / 6.1 in

Length of Brush: 52 mm / 2 in

Maintenance Frequency: Once a month

Replacement Frequency: 3 - 6 months

Main Brush


Material: Rubber bristle roller (soft rubber blades + symmetrical bristles)

Dimension: 181.9 mm / 7.2 in (length); ϕ 40.4 mm / ϕ 1.6 in (outer diameter)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months


Tapo RVA101

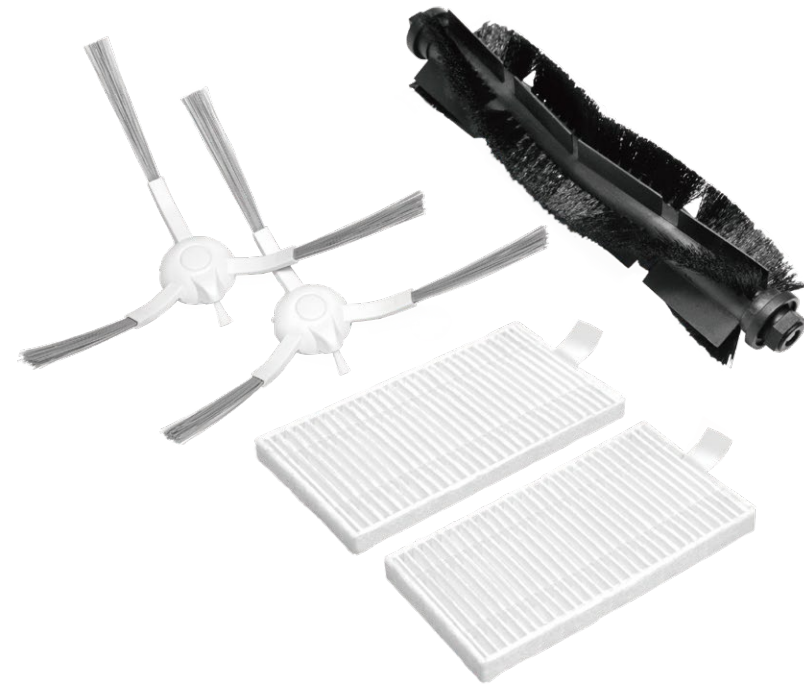

Main Brush ×1
Side Brush ×2
Washable HEPA Filter ×2

Compatible Model:

Tapo RV10 Lite
Tapo RV30C Plus

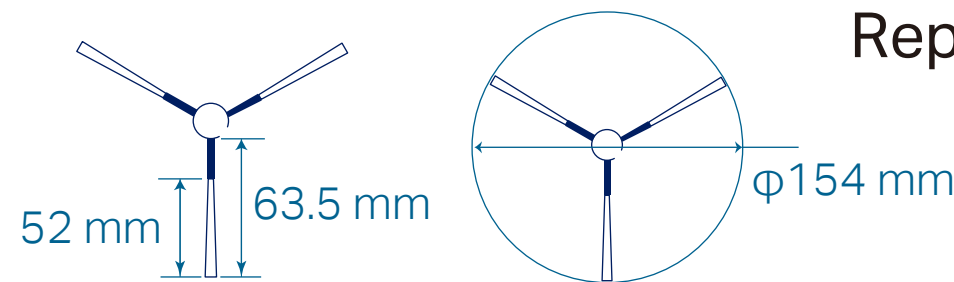

Washable HEPA Filter

Material: Washable PTFE + H10 Filtering

Dimension: 100 x 52 x 8.5 mm (3.9 x 2 x 0.3 in)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months

Side Brush

Material: ABS757 + TPU + PBT

Size Diameter: 154 mm / 6.1 in

Length of Brush: 52 mm / 2 in

Maintenance Frequency: Once a month

Replacement Frequency: 3 - 6 months

Main Brush


Material: Rubber bristle roller (soft rubber blades + symmetrical bristles)

Dimension: 181.9 mm / 7.2 in (length); ϕ 40.4 mm / ϕ 1.6 in (outer diameter)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months


// Tapo RVA102

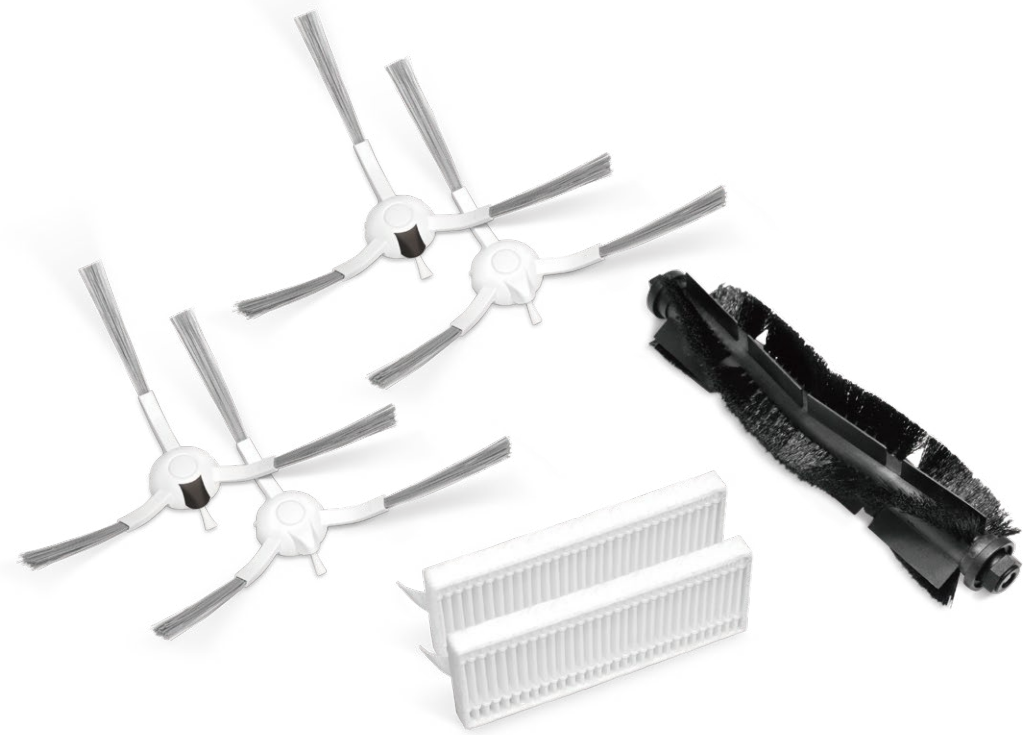

Washable HEPA Filter ×2
Side Brush (Left) ×2
Side Brush (Right) ×2
Main Brush ×1

Compatible Models:

Tapo RV20 Mop
Tapo RV20 Mop Plus

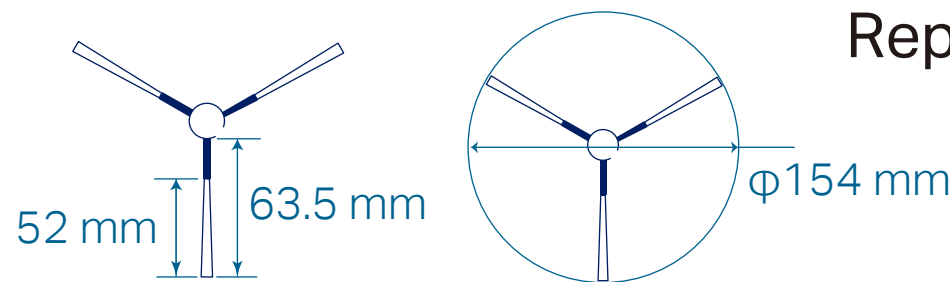

Washable HEPA Filter

Material: Washable PTFE + H11 filtering

Dimension: 100 x 40 x 8.5 mm (3.9 x 1.6 x 0.3 in)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months

Side Brush

Material: ABS757 + TPU + PBT

Size Diameter: 154 mm / 6.1 in

Length of Brush: 52 mm / 2 in

Maintenance Frequency: Once a month

Replacement Frequency: 3 - 6 months

Main Brush

Material: Rubber bristle roller (soft rubber blades + symmetrical bristles)

Dimension: 181.9 mm / 7.2 in (length); ϕ 40.4 mm / ϕ 1.6 in (outer diameter)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months

// Tapo RVA200



4L Disposable Dust Bag ×3

Compatible Models:

Tapo RV10 Plus
Tapo RV30 Plus
Tapo RV30C Plus
Tapo RV20 Plus
Tapo RV20 Mop Plus

Disposable Dust Bag

Dimension:

158 x 154.4 x 162.9 mm (6.2 x 6.1 x 6.4 in)

Material:

Dust Bag: Spunbond, melt blown electret nonwoven


Dust Bag Handle: Plastic

Replacement Frequency:


Up to 70 days (or just replace it when it is full)

Replacement Instructions


1. Open the top cover and pull up the handle of the dust bag to remove.

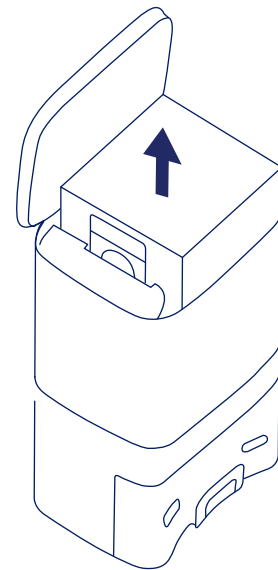

2. Throw away the used dust bag.

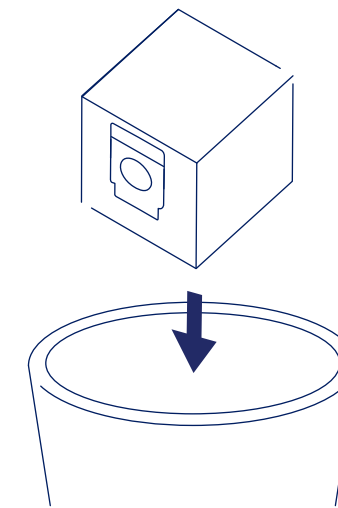

3. Install a new dust bag and replace the cover.

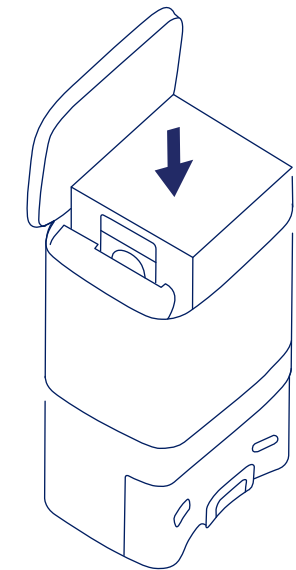

Tapo RVA300




Washable Mop Cloth ×3

Compatible Models:

Tapo RV30 Plus, Tapo RV30
Tapo RV10 Plus, Tapo RV10
Tapo RV20 Mop Plus
Tapo RV20 Mop

Washable Mop Cloth

Dimension:

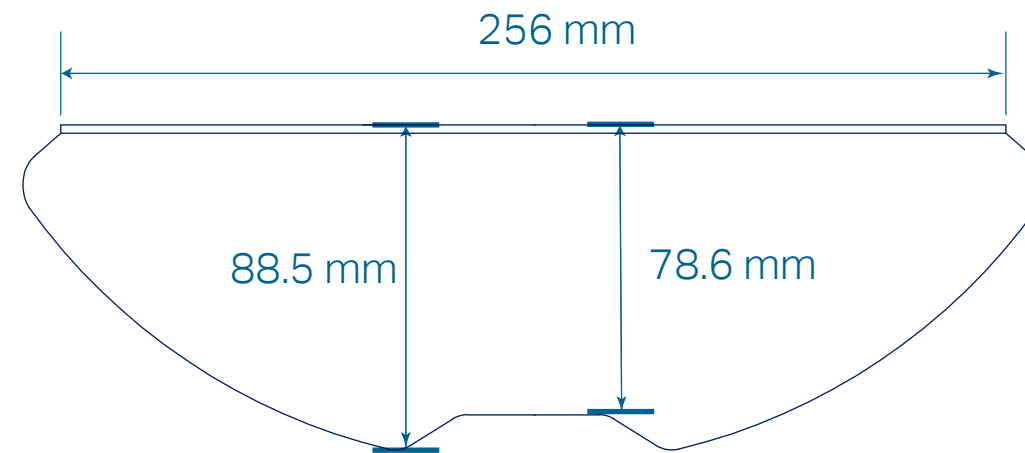


Material: Polyester and nylon

Maintenance Frequency: Wash after each use


Replacement Frequency: 2 - 3 months

Replacement Instructions


1. Remove the mop cloth mount.

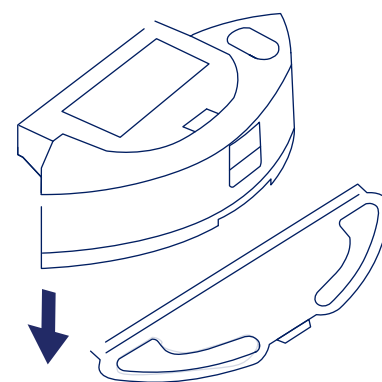


2. Remove the washable mop cloth.

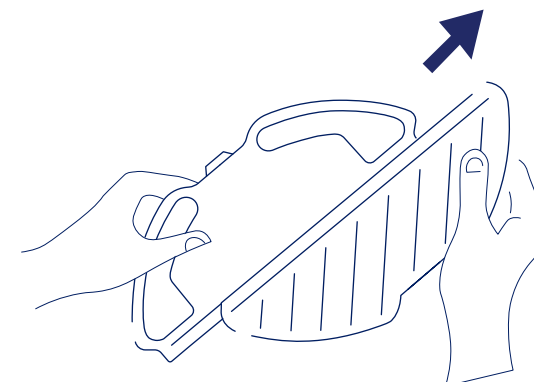

3. Clean the mop cloth.

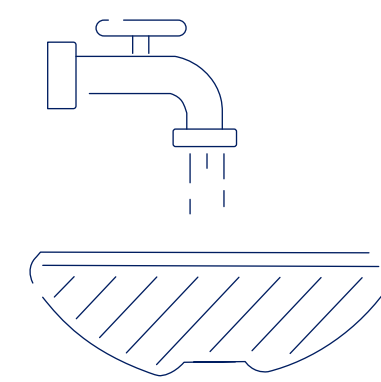

4. Sun dry for use.

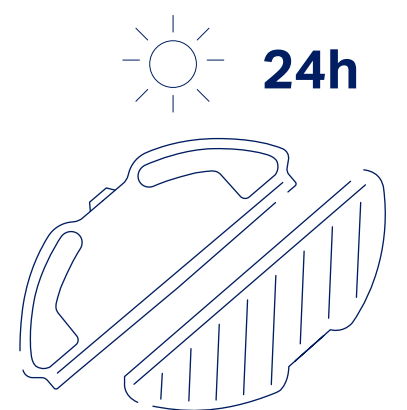

// Tapo RVA400



2 m / 6.6 ft Magnetic Tape ×2
3M Adhesive

Compatible Models:

Tapo RV10 Plus
Tapo RV10
Tapo RV10 Lite

Magnetic Boundary Strip


Dimension: 2 m x 25 mm x 3 mm (6.36 ft x 0.98 in x 0.12 in)

Replacement Frequency: Replace when worn

Instructions


Set Your Virtual Walls

Simply set up areas you don't want the robot to go.

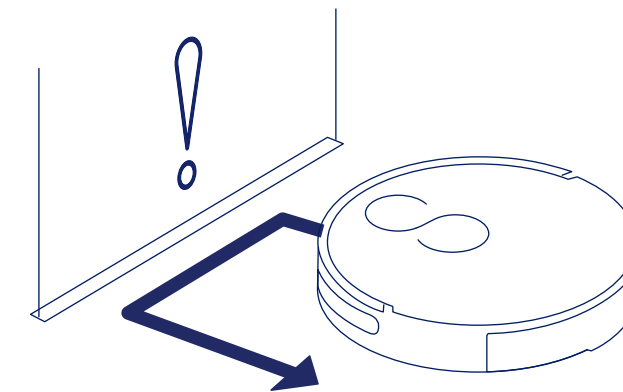


Tailor the Length Freely

Cuttable magnetic tape for precise placement.

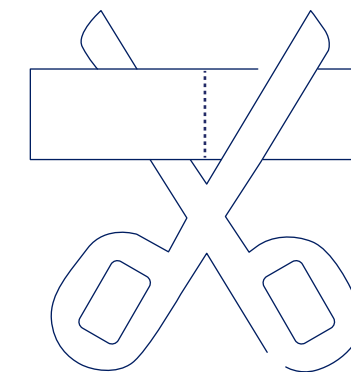


Easy to Use with 3M Adhesive

Provides highly flexible installation.

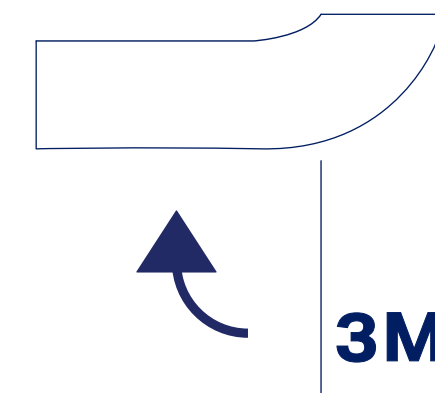


Tapo RVA103

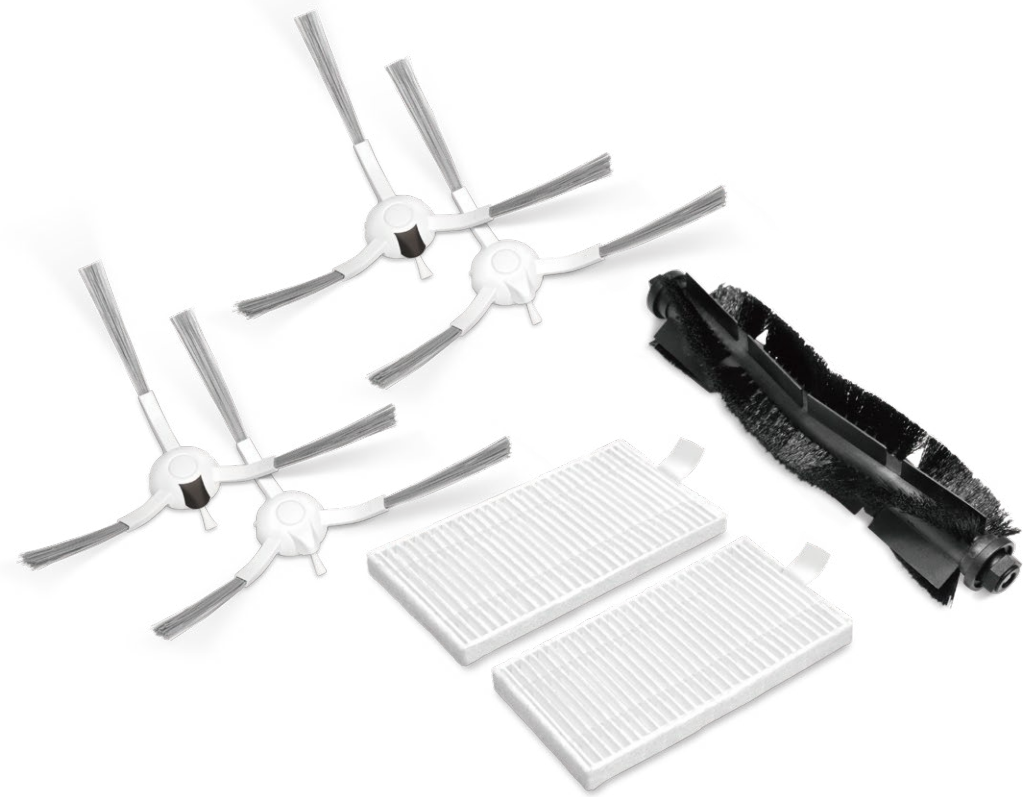

Washable HEPA Filter ×2
Side Brush (Left) ×2
Side Brush (Right) ×2
Main Brush ×1

Compatible Models:

Tapo RV20
Tapo RV20 Plus

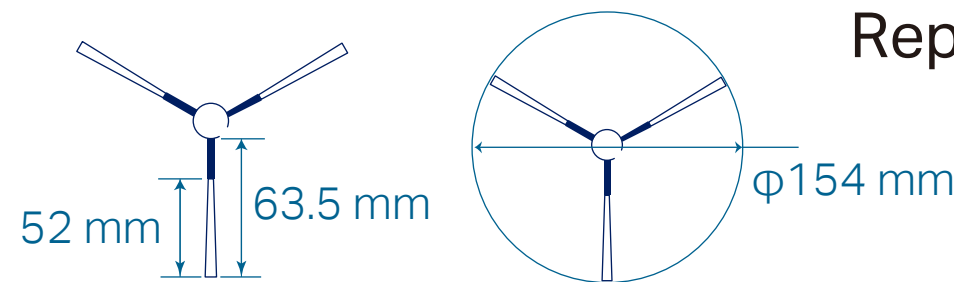

Washable HEPA Filter

Material: Washable PTFE + H10 Filtering

Dimension: 100 x 52 x 8.5 mm (3.9 x 2 x 0.3 in)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months

Side Brush

Material: ABS757 + TPU + PBT

Size Diameter: 154 mm / 6.1 in

Length of Brush: 52 mm / 2 in

Maintenance Frequency: Once a month

Replacement Frequency: 3 - 6 months

Main Brush

Material: Rubber bristle roller (soft rubber blades + symmetrical bristles)

Dimension: 181.9 mm / 7.2 in (length); ϕ 40.4 mm / ϕ 1.6 in (outer diameter)

Maintenance Frequency: Once a week

Replacement Frequency: 3 - 6 months